



© Pavex Parquet SRL. All rights reserved.  
The content of this material is the property  
of Pavex Parquet SRL. No part of this material  
should be reproduced and / or published  
without owner's consent.




# PARQUET BORDERS INSTALLATION

\*\*\*


## SHORT GUIDE

EDITION  
2011


**Step 1.**  
Let's take an irregular shape room -  
the worst case scenario !

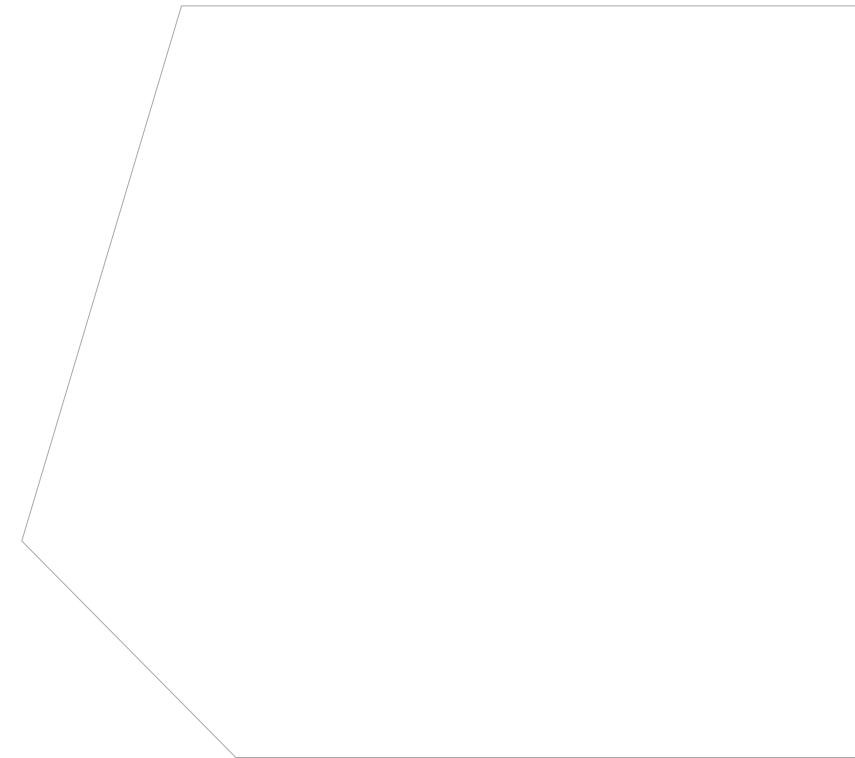


**Step 2.**  
Find some rigor in this room -  
drawing a line that will create a rectangle  
on the room's floor

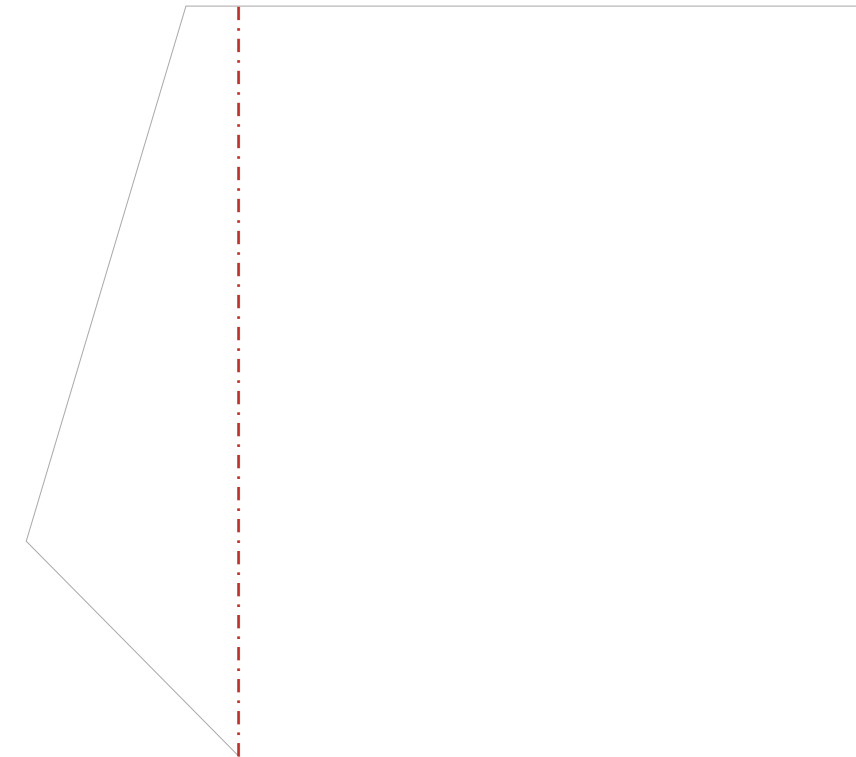


**Step 3.**  
Establish the areas on the floor -  
by drawing lines that will clearly locate the  
*central installation area* and the *border area*

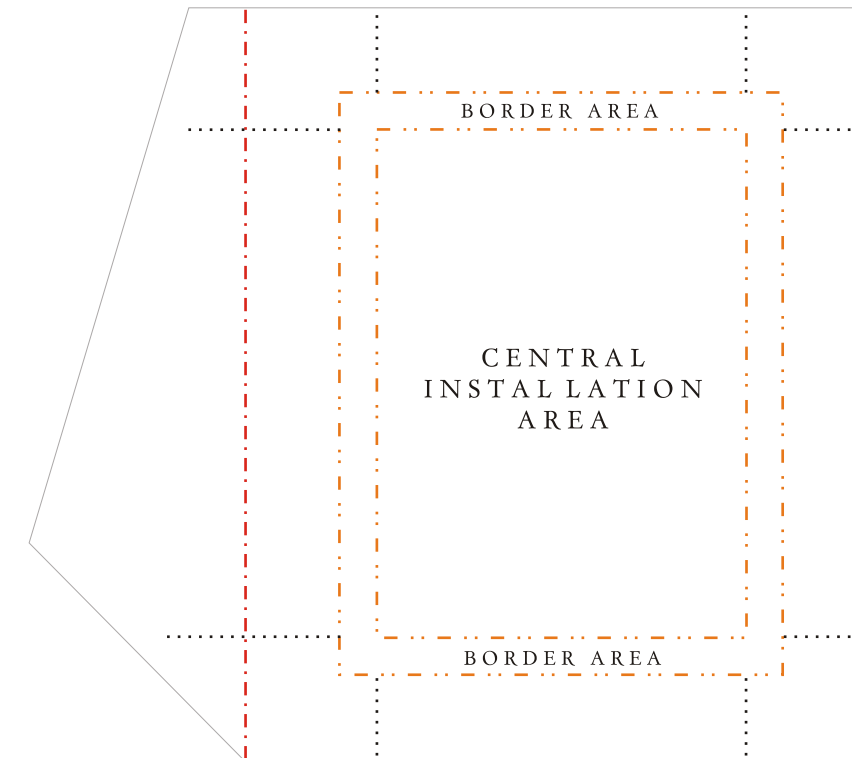


**Step 4.**  
Central area parquetry installation -  
the central area installation will stretch over  
the edges of the rectangle that marked it

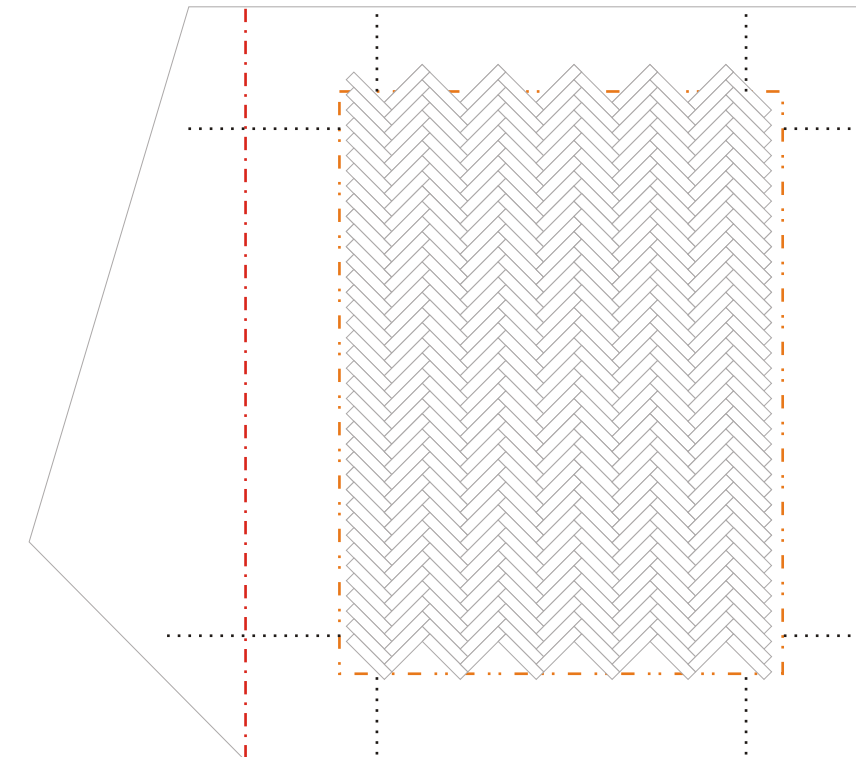


**Step 5.**  
Cut the central installation -  
follow the marks remained in the exterior of the  
central installation to set the lines to follow when  
cutting the excess of the central area  
parquetry installation

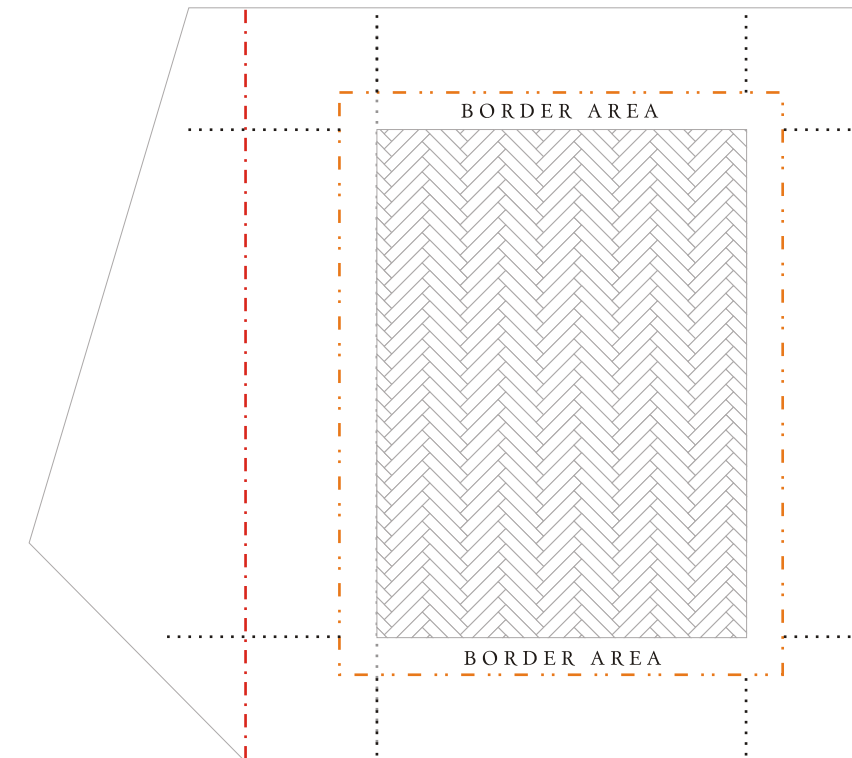

**Step 6.**  
Borders installation -  
a Greek key hardwood border pattern is installed to  
surround the rectangle of central installation

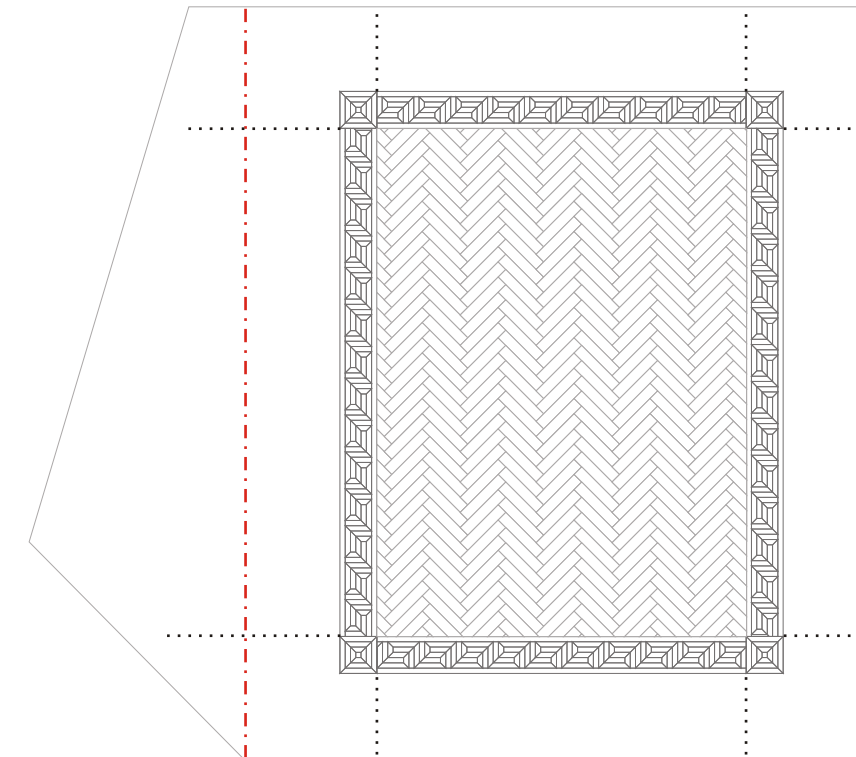

**Step 7.**  
Backfill strip installation -  
the *backfill strip* is installed to fill the rest  
of the space to the walls

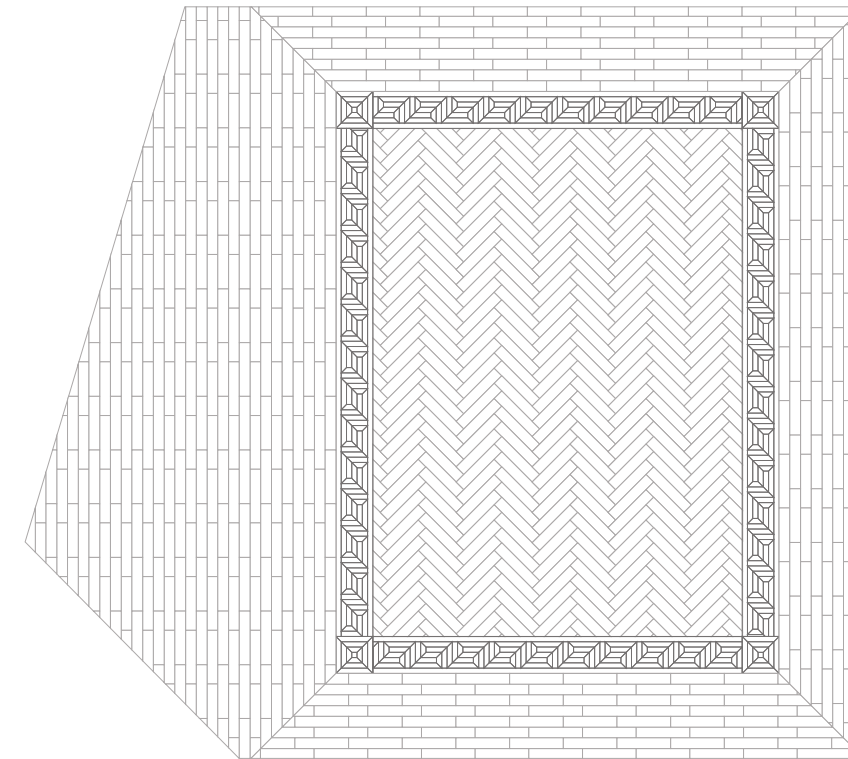



## Pavex Parquet SRL

11, Traian Street  
Sebes, Alba County  
515800 ROMANIA

T/F: + 40 - 258 - 730.786  
M: + 40 - 771 - 322.893  
or + 40 - 741 - 048.738  
e-Mail: [pavex.parquet@gmail.com](mailto:pavex.parquet@gmail.com)

© Copyright Pavex Parquet srl. All rights reserved.

Version 1.01

[www.pavexparquet.com](http://www.pavexparquet.com)